


BRUNTON®

PROFILE DUO TWO BURNER STOVE/GRILL

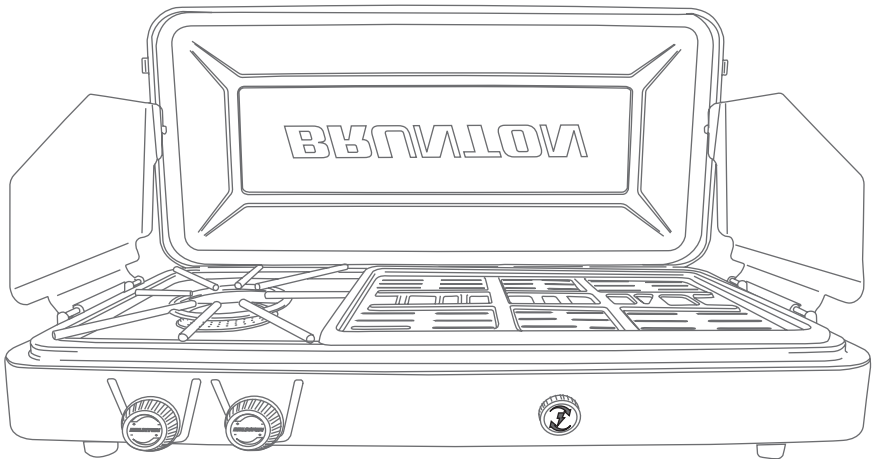

USERS MANUAL

GENERAL SAFETY INFORMATION

This manual contains important information about the assembly, use and maintenance of this propane stove. Keep this manual for future reference. Be sure to read this manual completely before using the Profile stove. Keep this manual and review it regularly to maintain awareness of procedures and warnings. This manual should be read in conjunction with the warnings on the unit.

Failure to follow the warnings printed here and on the stove may result in fire, property damage, injury or death.

Particular attention should be paid to information accompanied by the safety alert words:




SPECIFICATIONS

Ignition: Electronic Piezo ignition
Overall dimensions: 21.5"X11.75"X3.75" (closed)
Fuel: Propane
Burn time: Up to 1.5 hours
Output: 24,000 BTU (12,000 per burner)
Weight: 10 LBS
Materials:
Stainless Steel / Steel


 **CAUTION:** Read all Warnings and Operating Instructions before use and retain for future reference.

FOR YOUR SAFETY

Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other appliance.

 **CAUTION:** If you smell gas:

1. Do not attempt to light appliance.
2. Extinguish any open flame.
3. Disconnect fuel supply.

 **WARNING: CARBON MONOXIDE HAZARD**
This appliance can produce carbon monoxide which has no odor.
Using it in an enclosed space can kill you.
Never use this appliance in an enclosed space such as a camper, tent or car.



WARNING: FOR OUTDOOR USE ONLY

- Supply plenty of fresh air when using the camp stove. Do not obstruct the flow of combustion air or ventilation air.
- Do not use as a space heater.
- Stoves produce heat. Keep away from burnable materials. Do not place the stove any closer than 24" to combustibles.
- Use a flat, level support surface where the stove is safe from accidental tipping.
- Use only 16oz. disposable propane cylinders marked USDOT-39 or TC CAN/CSA B339.
- Use only with propane fuel.
- Use only the 16 psi regulator included with your stove. Do not attempt to alter.



CAUTION

Propane is highly flammable and under pressure.

- Do not store in temperatures over 120°F
- Never use a flame to check for leaks. Use soapy water.
- Keep out of the reach of children at all times.
- Keep cylinders upright in use and storage for vapor withdrawal.
- The smell of gas indicates a leak. Close valves and check for leaks by brushing soapy water on all joints. There is a leak if bubbles appear. Tighten the joint until the bubbles quit.
- Always check all connections for dirt or damage before assembling.
- Do not leave stove unattended while in use.
- Always detach propane cylinder when stove is not in use.

PREPARING THE STOVE/GRILL FOR USE

1. Place stove on a flat, level, sturdy surface.
2. Open lid and align holes in windshield with tabs on inside of lid. Snap into place as shown in Figure #1.
3. Make sure both burner valves are OFF.
4. Push regulator assembly firmly into stove. Tighten nut securely as shown in Figure #2.
5. GRILL USE: Ensure that the drip tray is in place
6. To make clean up easy, you may choose to place some aluminum foil to line the tray below the grill burner.
7. Adjust the burner valve to high (Counter Clockwise) and twist the piezo. Repeat the process if necessary for the grill burner.
NOTE: the flame should be blue with a hint of yellow on the tips.
8. To turn off, Turn knobs (Clockwise) until the flame is extinguished.

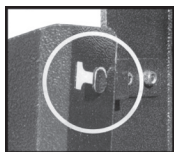


figure 1

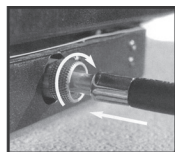



figure 2

OPERATING INSTRUCTIONS

 **WARNING:** DO NOT put hands or any other body parts over the burner during lighting or when in use to prevent burns.

FOR YOUR SAFETY: DO NOT store or use gasoline or other flammable vapors, liquids, or chemicals in the vicinity of this or any other appliance.

1. Turn left burner valve on (counter-clockwise) and twist ignition knob (clockwise) until the burner ignites. Repeat Step 1 for the right burner.
2. Adjust the flame to the desired height. Flame should be compact and medium blue in color.
3. To shut OFF, turn the valve off (clockwise)


CLEANING YOUR STOVE

1. Allow grill and burners to completely cool.
2. Remove grill from the stove.
3. Wash the stove with a damp, soapy cloth. Do not use abrasive materials.
4. Avoid getting dirt in to the valves and regulator. Always store regulator/hose under the grill, inside stove during transportation.

STORING STOVE

1. Remove the propane cylinder, allow grill and burners to cool, and store the regulator/hose under the grill.
2. Unlock windshields from lid.
3. Fold windshields inward.
4. Close lid and latch.

 **CAUTION:** DO NOT leave propane cylinder attached to the stove while not in use.

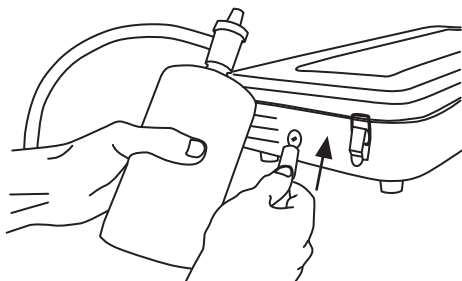


ATTACHING FUEL

Slide hose over stove post. Then tighten threads on hose until snug.

OPENING LID

Flip latches on left and right sides of stove. Open lid and lock windshields into place.

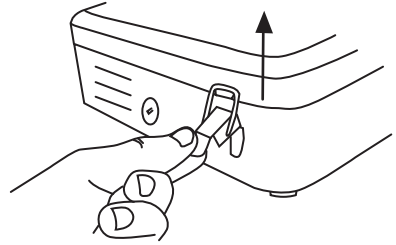


LIGHTING STOVE

Turn left burner valve on (counter-clockwise) and ignite piezo by twisting ignition knob clockwise. Turn right valve on and turn piezo ignition switch to light right burner.

If the burners fail to light:

Turn control valve off and repeat the lighting instructions above.

Burner valve

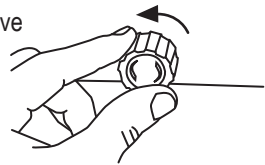


Piezo ignition switch





GREASE TRAY

Slide out grease tray from under stove and clean after every use

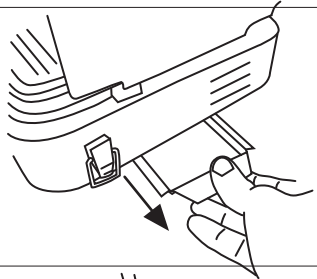

CLEANING

Burner grate and grill surface can be easily removed to clean grease trap.

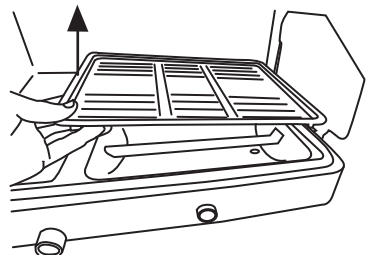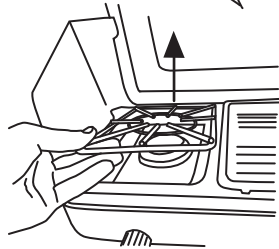



Warranty Registration

Please return within 30 days of purchase

Name: _____

Address: _____

City: _____ State: _____ Zip Code : _____

Phone : _____ Email: _____

Date Purchased: _____

Would you like to receive a Brunton catalog? ()Yes ()No

Please let us know where you purchased your Profile Duo stove?

Store Name: _____

Address: _____

City: _____ State: _____ Zip Code : _____

Online site _____ () Catalog _____

() Gift () Brunton () Other _____

Do you own another Brunton product?

() Yes. Product: _____ () No