



66SPECTRA™ & 6JET-L/R™ Instructions Orienteering Compasses

66SPECTRA Instructions

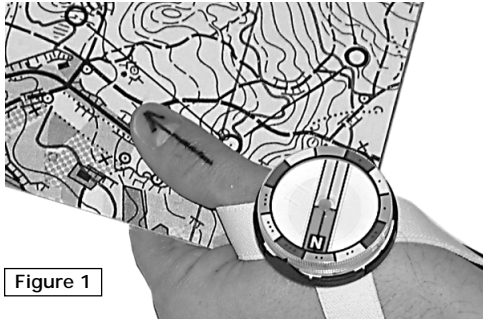


Figure 1

- 1) Place the 66SPECTRA on your right or left hand (**figure 1**).
- 2) Fold the map so the magnetic meridian lines are parallel with the edge of the printed map.
 - * The starting position and destination should be visible.
- 3) Using your SPECTRA hand, hold the map with your thumb parallel to the desired direction of travel (**figure 1**).
 - * Use your thumb as a baseplate.
- 4) Orient the map by rotating your body until the magnetic needle is parallel with the magnetic meridian lines.
- 5) Read the color and symbol the NORTH end of the needle points, e.g. "**blue -- two dot**".
 - * Remember the color and symbol as you run to your destination.

Tips!

- a. Make a habit of checking your direction and position on the map.
- b. Draw a fine arrow, using a pen, permanent marker, or finger nail varnish on top of your thumb. This allows you to point the arrow in the intended direction of travel, and makes position location more accurate.

6JET-R/L Instructions

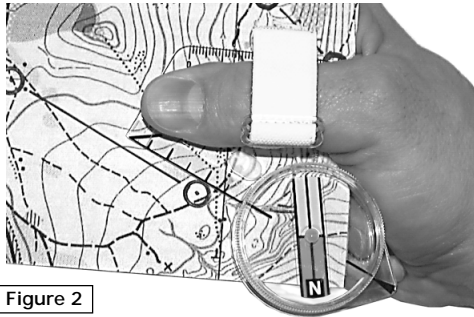


Figure 2

- 1) Place the 6JET on your hand (**figure 2**).
- 2) Fold the map so the magnetic meridian lines are parallel with the edge of the printed map.
 - * The starting position and destination should be visible.
- 3) Using your 6JET hand, hold the map with the black, direction of travel arrow pointing in the desired direction of travel (**figure 2**).
- 4) Orient the map by rotating your body until the magnetic needle is parallel with the magnetic meridian lines.
- 5) Run to your destination.

Tips!

- a. Make a habit of checking your direction and position on the map.
- b. As you check your location on the map, move your compass forward during your run. This will help you estimate the distance and amount of time until you reach your destination.

Specifications

66SPECTRA™

Size: 1.88" diameter x 0.63" (48 mm diameter x 16 mm)
Weight: 1.5 oz. (43 g)
Bearing: Sapphire
Scales: None

6JET™-R/L

Size: 3.75" x 2.88" x 0.5" (95 x 73 x 13 mm)
Weight: 1.5 oz. (43 g)
Bearing: Sapphire
Scales: cm/mm & 1:15,000

BRUNTON
620 E. MONROE
RIVERTON, WY 82501
(307) 856-6559
SUPPORT@BRUNTON.COM
WWW.BRUNTON.COM